

Arduino / ESP32 Projects

- [ESP32 - Complex Waveform Generator V2](#)
- [ESP32 - CWG Driver & Amplification](#)
- [ESP32 - Complex Waveform Generator V3](#)
- [2 Arduino - Dual Channel - Triple AND Gate \(Perfect Pulse Driver\)](#)

ESP32 - Complex Waveform Generator V2

Setting Up The App

ESP32 Complex Waveform Generator - Arrangement for WROOM-32 or WROVER-E (DevKit-C)

<https://www.youtube.com/embed/AxDYTR773SM>

PARTS Required

- 1 - ESP32 (WROOM-32 or WROVER-32) with 16 exposed pins
- 1 - ESP32 Breakout Board or equivalent pin header block
- 7 - Rotary Encoders (i.e. KY-040 Rotary Encoder Module CYT1062)
 - TODO: add ≥ 2 more for Elongation adjustments.
- 1 - +5VREG 1A Power Supply for ESP32 (i.e. ATX PowerSupply)

Installation Prerequisites

Install ESP Libraries in Arduino-IDE v2.0

```
ArduinoJson  
ESP32Encoder
```

Step 1. Open Esp32Full.ino and set Wifi Credentials

```
// ##### Change Me - Local Wifi Info #####  
const char *SSID = "NETGEAR";  
const char *PWD = "12345678";
```

Step 2. Configure free local LAN IP address

Check your Router for more information

```
// ##### CHANGE ME #####  
// Set your Static IP address to a free IP in your local network  
IPAddress local_IP(192, 168, 1, 8);  
// Set your Gateway IP address
```

```
IPAddress gateway(192, 168, 1, 1);

IPAddress subnet(255, 255, 255, 0);
IPAddress primaryDNS(8, 8, 8, 8); //optional
IPAddress secondaryDNS(8, 8, 4, 4); //optional
```

~~Step 3. Configure ESP_HOST in Javascript File~~

Edit `./assets/espwavegen.js` and set the IP address used in Step 2 above.

~~TODO: Make configurable in the web interface~~

Save and close the file

Step 3. Upload The code in `Esp32Full.ino`

Paste the code into your Arduino-IDE and upload it to your ESP32

[Installing the ESP32 Board in Arduino IDE](#)

Step 4. Access the WebApp in your Web Browser

Open Web Browser

Open `index.html` in the `WebApp` directory below this file

- File -> Open -> Browse to WebApp/index.html -> Open

Interface is now displayed!

Step 5: Enjoy!!

Please post pics and videos of your waves, and let others know how achievable this is!

← → ↻ File | /home/cbake/esp32-cwg-offline/WebApp/index.html

ESP32 Complex Waveform Generator

Pulse Period Manipulation 1.890 kHz

ESP32 Status: QUERY RETRY RESET

Width: $158 * 3 = 474 \mu\text{s}$
 Space: $55 * 1 = 55 \mu\text{s}$
 Gate OffTime: $404 * 1 = 404 \mu\text{s}$

Width Modifier: x3
 Space Modifier: x1
 Gate Modifier: x1

Elongation: x1.00 Zero
 Elongation: x1.00 Zero

RunMode: ON OneShot Alternate OFF
 Sync Mode: ON


Sync Offset: 0 * gatemodifier

Pulse Count: 1 NPN Temp: 0.00 F

GATE OFF

Need Amplification?

See: [ESP32 - Complex Waveform Generator - Driver & Amplification](#)

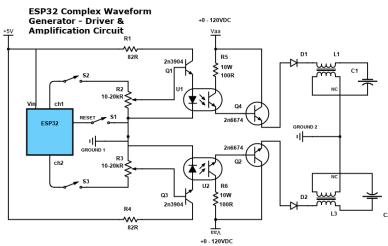

Additional Troubleshooting / Customization

Optional: Configure alternate Output Pins

- Output will be on Pins D2 and D4 by default

```
// #### Output Pins ####
int pinChannel1 = 2;
int pinChannel2 = 4;
```

Optional: Adjust Encoder Pins if needed

```
int pulseCount_EncoderPIN1 = 14;
int pulseCount_EncoderPIN2 = 13;
```

```
int pulseWidth_EncoderPIN1 = 35;
int pulseWidth_EncoderPIN2 = 34;
int pulseSpace_EncoderPIN1 = 19;
int pulseSpace_EncoderPIN2 = 18;
int gate_freq_EncoderPIN1 = 22;
int gate_freq_EncoderPIN2 = 23;

int pulseWidthModifier_EncoderPIN1 = 27;
int pulseWidthModifier_EncoderPIN2 = 26;
int pulseSpaceModifier_EncoderPIN1 = 5;
int pulseSpaceModifier_EncoderPIN2 = 32;
int gateModifier_EncoderPIN1 = 25;
int gateModifier_EncoderPIN2 = 33;
```

ESP C+ Code

Git Repo: <https://bitbucket.org/cbake6807/esp32-complex-waveform-generator/src/master/>

Troubleshooting:

View the Console Log for errors in your browser while clicking the app's sliders buttons etc..

Look in the Network tab for red errors. 404 or other. Sometimes the ESP may drop or reject the connection on the first attempt. Just refresh the browser once or twice and it should resolve.

Screenshot from 2022-08-06 13-24-55.png

<https://www.browserstack.com/guide/inspect-element-in-chrome#:~:text=One%20of%20the%20easiest%20ways,%2C%20Sources%2C%20and%20other%20tools.>

Confirm the ESP is a connected host in your network and was given the IP you specified



<https://www.wikihow.com/See-Who-Is-Connected-to-Your-Wireless-Network>

Code notes if internet connectivity isn't an option. Also, encoder wiring connections for this particular setup (Notepad++ document file type). [Chris Bake ESP32 notes.txt](#)


Notepad++ download: [Notepad++](#)

ESP32 - CWG Driver & Amplification


A dual channel, dual isolated power supply, pulse amplification for driving all VIC arrangements

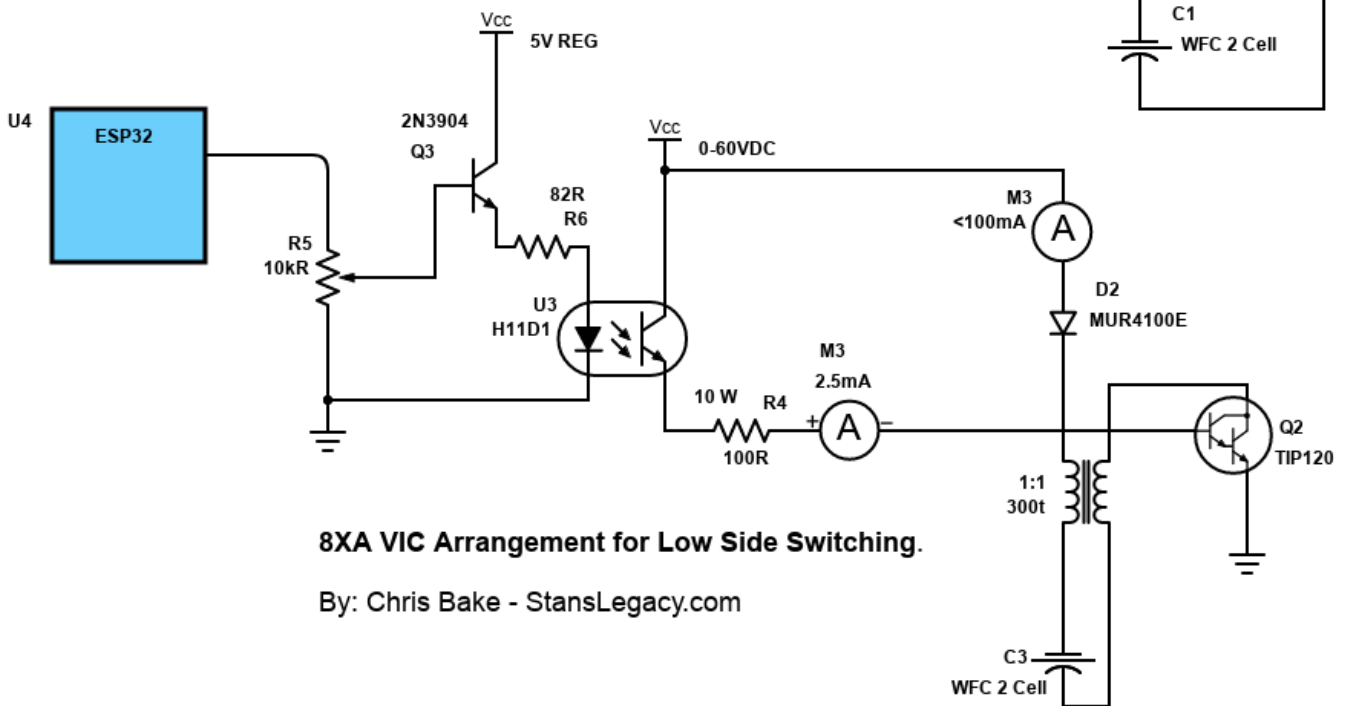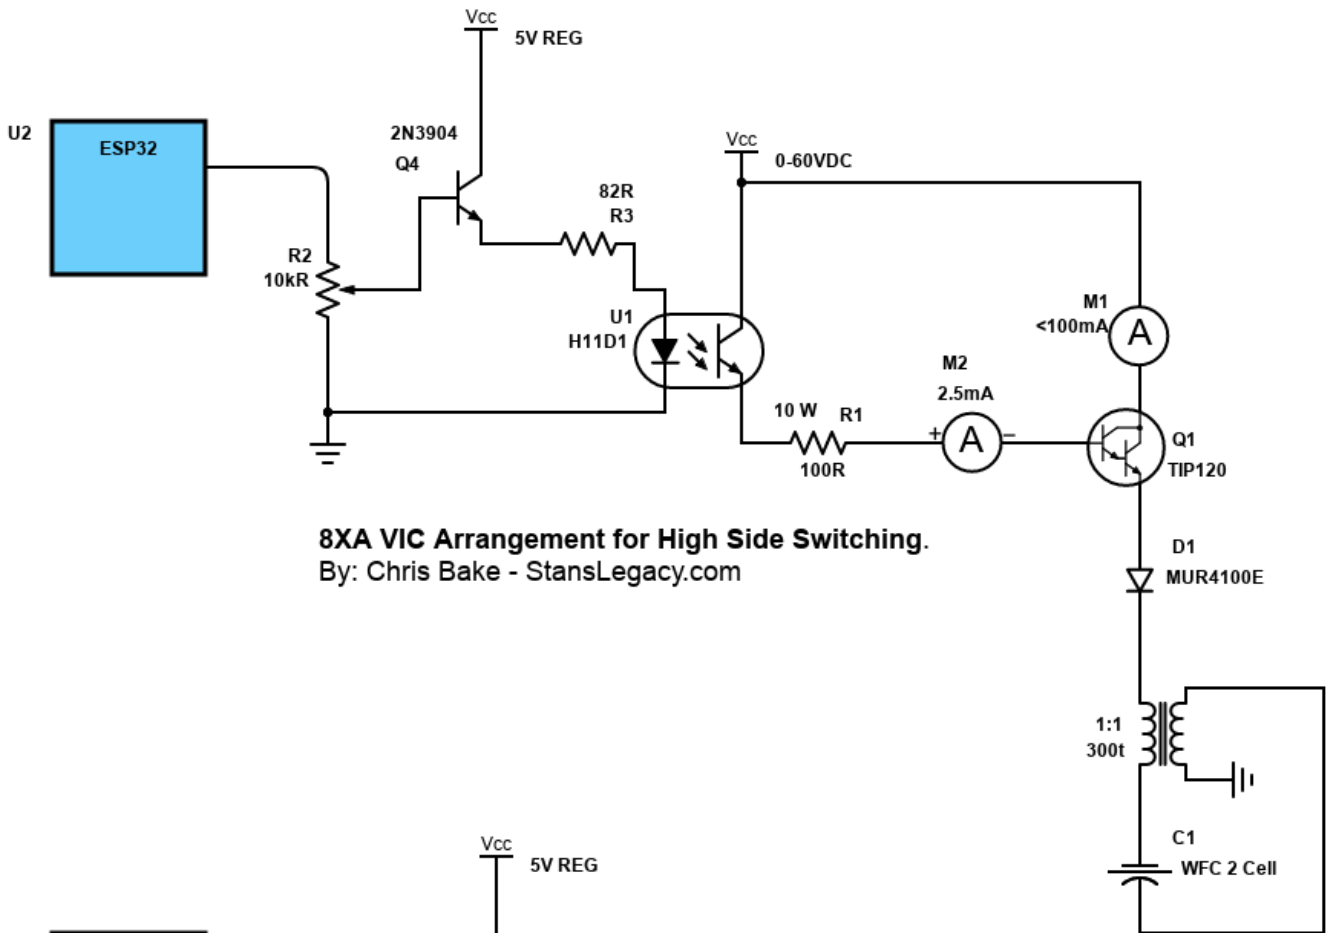

ESP32 Complex Waveform Generator - Driver & Amplification Circuit

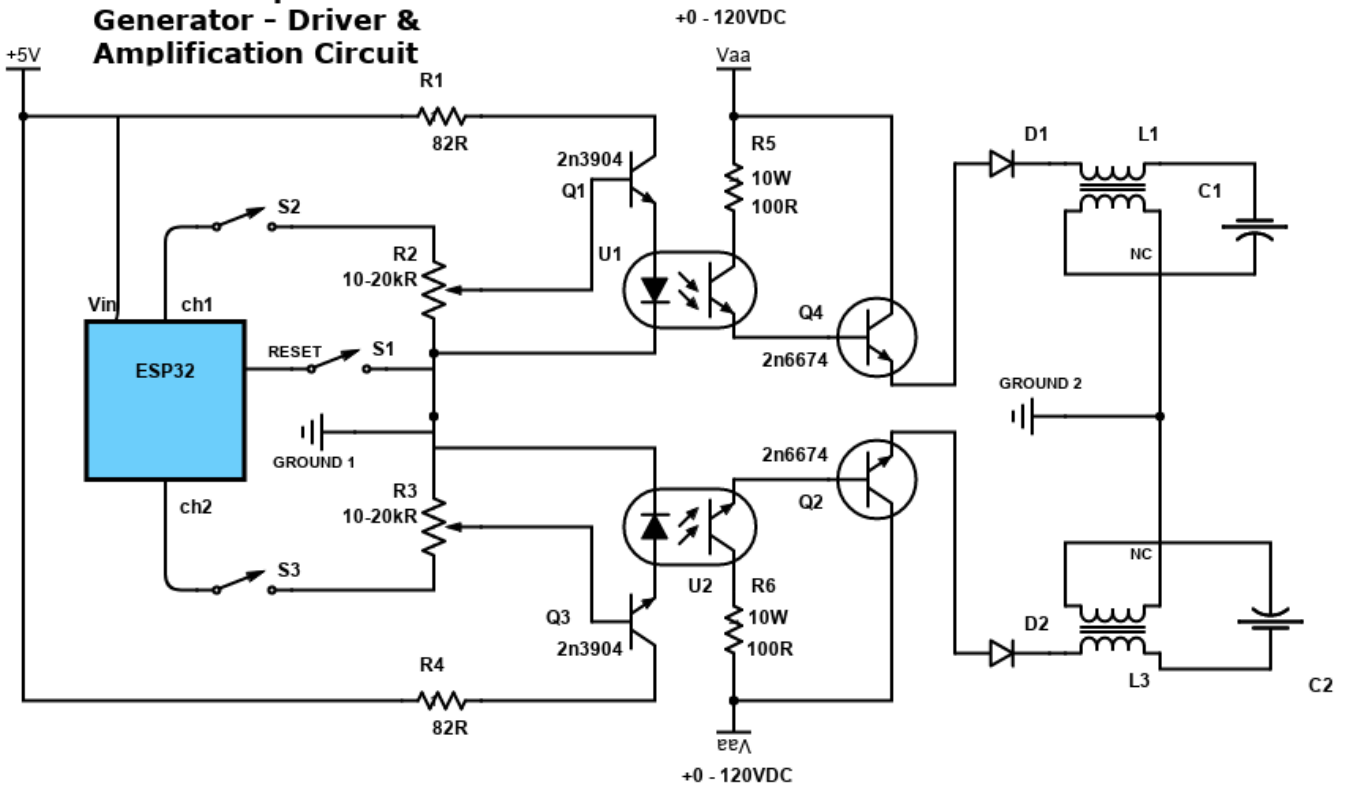


Arrangement favoring Particle Oscillation as an Energy Generator

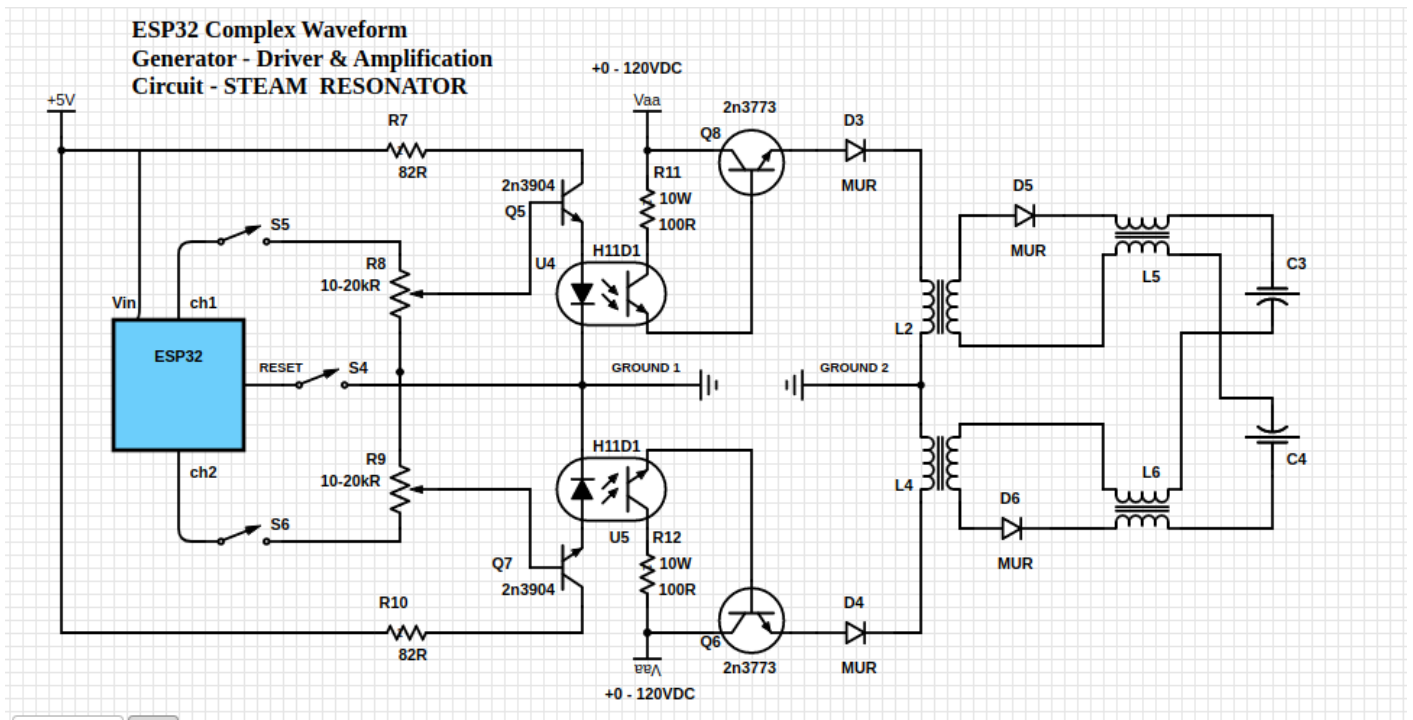

Variation 2 - Ground Bonded / "Forced" Uni-polar Operation

ESP32 Complex Waveform
Generator - Driver & Amplification
Circuit - STEAM RESONATOR -

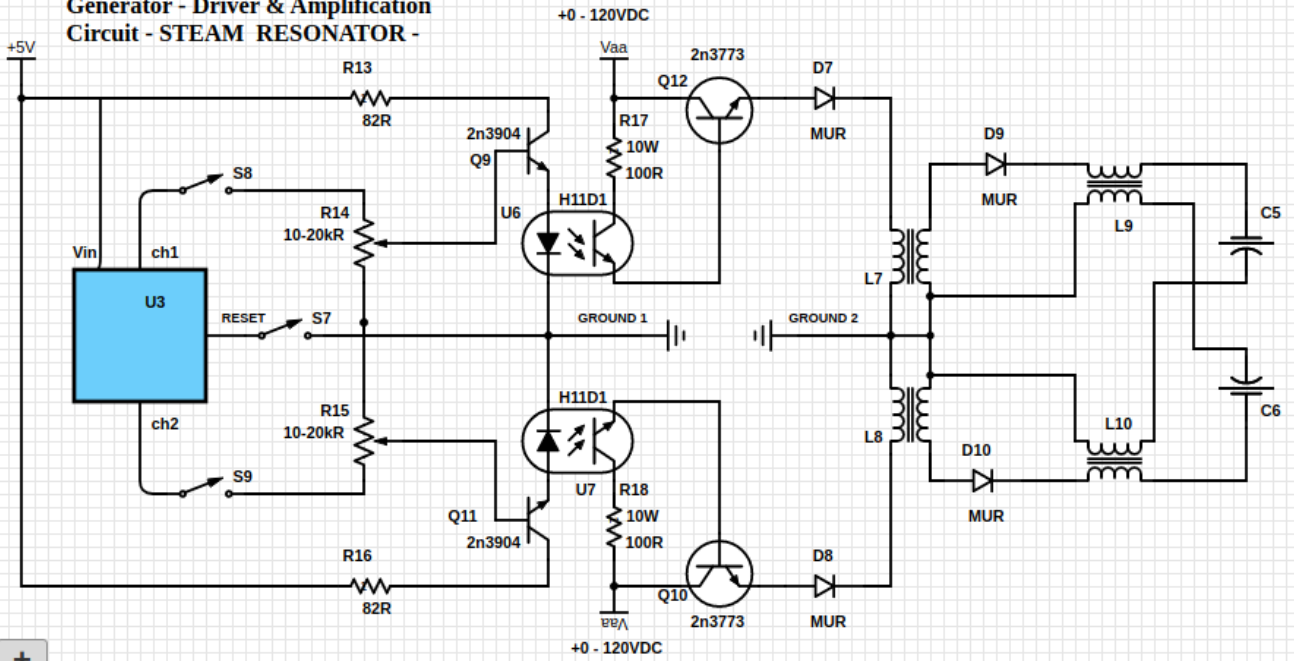


:1 +

ESP32 - Complex Waveform Generator V3

Installing and Using the ESP32 Complex Waveform Generator V3 Application

Screenshot of web interface

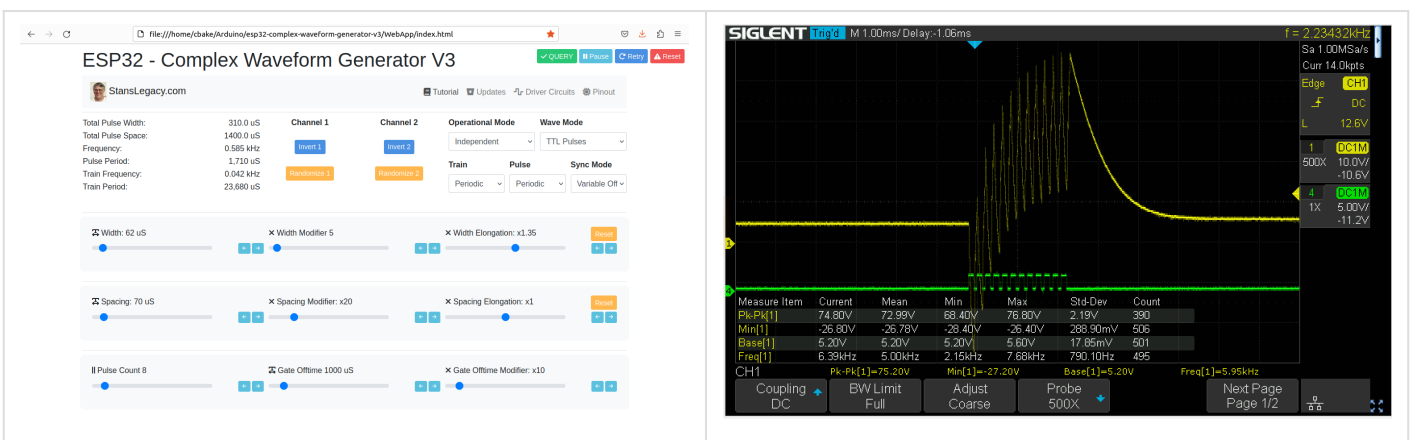

Prerequisites

To use this application, you need to have the Arduino IDE installed on your computer. You can download the Arduino IDE from the official website: <https://www.arduino.cc/en/software>

- ESP32 Development Board:** You'll need an ESP32 development board, such as the popular ESP32-DevKitC or ESP32-WROOM-32D. These boards typically come with Wi-Fi and Bluetooth capabilities and a variety of GPIO pins for interfacing with peripherals.
- Rotary Encoders:** To adjust the waveform parameters, you will need a total of 7 rotary encoders. You can use KY-040 rotary encoder modules or any other type of incremental rotary encoder with built-in push buttons. Ensure that the rotary encoders you choose have a CLK, DT, and SW (push button) pinout.
- Breadboard and Jumper Wires:** A breadboard and jumper wires are required to make the necessary connections between the ESP32 development board and the rotary encoders.
- Power Supply:** You will need a power supply to power the ESP32 development board. This can be a USB power supply, a battery, or any other suitable power source that meets the board's voltage and current requirements, such as an ATX Supply from a computer. 5VDC 1A minimum is recommended to prevent brownout conditions while interacting with

a driver circuit.

5. **Oscilloscope (optional):** To visualize the generated waveform, you can use an oscilloscope. Connect the output pins (channel1OutputPin and channel2OutputPin) from the ESP32 development board to the oscilloscope's input channels.

Installing required libraries

1. **ArduinoJson:** To install the ArduinoJson library, follow these steps: a. Open the Arduino IDE. b. Click on `Tools` in the menu bar, then `Manage Libraries`. c. In the Library Manager window, search for "ArduinoJson" in the search bar. d. Find "ArduinoJson by Benoit Blanchon" in the search results and click on the `Install` button.
2. **ESP32Encoder:** To install the ESP32Encoder library, follow these steps: a. Open the Arduino IDE. b. Click on `Tools` in the menu bar, then `Manage Libraries`. c. In the Library Manager window, search for "ESP32Encoder" in the search bar. d. Find "ESP32Encoder by Gil Mora" in the search results and click on the `Install` button.

Uploading the Application

1. Download the source code for the [ESP32 Complex Waveform Generator V3](#) application or copy it to a new file in the Arduino IDE.
2. Connect the ESP32 development board to your computer using a USB cable.
3. In the Arduino IDE, select the appropriate board and port under `Tools` > `Board` and `Tools` > `Port`.
4. Click on the `Upload` button (right-facing arrow icon) in the Arduino IDE to compile and upload the application to the ESP32 development board.

Hardware Setup

1. Wire the rotary encoders and other components according to the pin assignments defined in the source code.

| ESP32 Pin | Encoder Connection | Encoder Function |
|-----------|----------------------|------------------|
| 14 | Pulse Encoder CLK | Pulse count |
| 13 | Pulse Encoder DT | Pulse count |
| 35 | Width Encoder CLK | Pulse width |
| 34 | Width Encoder DT | Pulse width |
| 19 | Spacing Encoder CLK | Pulse spacing |
| 18 | Spacing Encoder DT | Pulse spacing |
| 23 | Off-time Encoder CLK | Off-time |
| 22 | Off-time Encoder DT | Off-time |

| ESP32 Pin | Encoder Connection | Encoder Function |
|-----------|--------------------------|-------------------|
| 27 | Width Mod Encoder CLK | Width modifier |
| 26 | Width Mod Encoder DT | Width modifier |
| 15 | Spacing Mod Encoder CLK | Spacing modifier |
| 32 | Spacing Mod Encoder DT | Spacing modifier |
| 33 | Off-time Mod Encoder CLK | Off-time modifier |
| 4 | Off-time Mod Encoder DT | Off-time modifier |
| 2 | Output Channel 1 | Output waveform |
| 5 | Output Channel 2 | Output waveform |

2. Make sure the connections are secure and verify the CLK/DT pins for each encoder are wired correctly, and that each encoder turns in the correct direction relative to the respective parameter change.

Using the Application


1. Power on the ESP32 development board.
2. Use the rotary encoders to adjust the following parameters:
 - Pulse count
 - Pulse width
 - Pulse spacing
 - Off-time
 - Width modifier
 - Spacing modifier
 - Off-time modifier
3. The application will generate a complex waveform based on the adjusted parameters.
4. Connect the output pins (channel1OutputPin and channel2OutputPin) to an oscilloscope to visualize the generated waveform.
5. Open the WebApp/index.html page in a browser.
6. Fine-tune the parameters using the rotary encoders to achieve the desired waveform shape and characteristics.

Next Steps For Utilization

- Build ESP32 CWG - VIC Driver circuit(s) - <https://stanslegacy.com/books/chris-bake/page/esp32-cwg-driver-amplification>
- Cell Construction - <https://stanslegacy.com/books/ethan-crowder/page/resonant-cavity-related>

Troubleshooting

1. If the waveform does not match the expected output, verify the wiring connections and ensure the rotary encoders are functioning correctly.
2. If the application does not upload to the ESP32 development board, double-check the board and port selection in the Arduino IDE.
3. If the rotary encoders behave unexpectedly (e.g., adjusting one parameter affects another), check the CLK/DT pin assignments and wiring.
4. Click the Pinout button to fetch the currently defined GPIO pins from the ESP32 directly and confirm they are wired correctly.

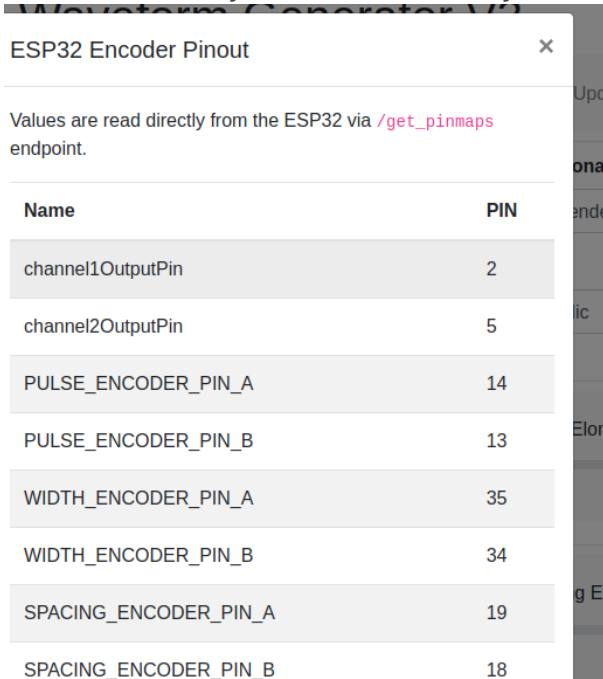

ESP32 Encoder Pinout

Values are read directly from the ESP32 via `/get_pinmaps` endpoint.

| Name | PIN |
|-----------------------|-----|
| channel1OutputPin | 2 |
| channel2OutputPin | 5 |
| PULSE_ENCODER_PIN_A | 14 |
| PULSE_ENCODER_PIN_B | 13 |
| WIDTH_ENCODER_PIN_A | 35 |
| WIDTH_ENCODER_PIN_B | 34 |
| SPACING_ENCODER_PIN_A | 19 |
| SPACING_ENCODER_PIN_B | 18 |

For further assistance or to report any issues, contact the application's support team or refer to the community forums.

2 Arduino - Dual Channel - Triple AND Gate (Perfect Pulse Driver)

By: Chris Bake

Arduino Code: <https://bitbucket.org/cbake6807/dualtripleseq/src/master/>

Parts List

1. **External Signal Generator:** 0-5Vppk output.
2. **Power Supply:** ATX is ideal, providing +5V REG and +12V REG.
3. **2N7000 Signal MOSFETs:** Quantity 6.
4. **IRFP460 or Similar Power N-channel MOSFET:** Quantity 2.
5. **56Ω 1/8W Resistors:** Quantity 10.
6. **100Ω 1/2W Resistors:** Quantity 2.
7. **4.7kΩ Resistors:** Quantity 2.
8. **2N3906 PNP General Purpose Transistor:** Quantity 2 (can be substituted with any general PNP transistor).
9. **IR2110PB Gate Driver Chip 14-pin:** Quantity 2.
10. **Arduino Nano (or similar):** Quantity 2 (must support hardware PCNT).
11. **Rotary Encoder:** Quantity 1.

Software Requirements

- **Arduino IDE:** Ensure it is installed and updated to the latest version.
- **Encoder Library:** Install via the Arduino Library Manager.

Arduino Setup

Pulse Counter Arduino

1. **Upload Script**
 - Open the Arduino IDE.
 - Connect the first Arduino (PulseCounter) to your PC.
 - Open `PulseCounter.ino` from the provided file.
 - Upload the script to the Arduino.
2. **Connect the Encoder**
 - Connect the encoder's VCC to the Arduino's 5V pin.

- Connect the encoder's GND to the Arduino's GND pin.
- Connect the encoder's CLK and DT pins to two digital pins on the Arduino D2 and D3.
- Connect the encoder's Button pin to D4.

3. Verify Encoder Output

- Open the Serial Monitor in the Arduino IDE.
- Rotate the encoder and check the output to confirm it is functioning correctly.

```
“ const int outputPin = 9;
  const int encoderPinA = 2;
  const int encoderPinB = 3;
  const int encoderSwitchPin = 4;
  const int disableSwitchPin = 6;
```

Adding a Pushbutton for Sync Mode Toggle

To add a pushbutton to the Sequencer Arduino for toggling the sync mode, follow these instructions:

Parts Required

- **Pushbutton:** Quantity 1
- **10kΩ Resistor:** Quantity 1
- **Connecting Wires**

Hardware Connections

1. Connect the Pushbuttons

- NANO1 - D6 -> BUTTON -> GND
- NANO2 - D4 -> BUTTON -> GND

Summary of Connections

Sequencer Arduino

1. Upload Script

- Disconnect the PulseCounter Arduino and connect the second Arduino (Sequencer) to your PC.
- Open `Sequencer.ino` from the provided file.
- Upload the script to the Arduino.

Pin Mapping and Connections

Connecting the Two Arduinos

- **PulseCounter Arduino to Sequencer Arduino**

- Signal Generator (+5Vppk max) → PulseCounter NANO1 - D5 (Input)
 - Signal Generator (+5Vppk max) → Q2 **First** 2N7000 FET Gate
 - Signal Generator (+5Vppk max) → Q7 **First** 2N7000 FET Gate (opposite branch)
- PulseCounter NANO1 - D9 (Output) → Sequencer NANO2 - D2 (Input)
 - PulseCounter NANO1 - D9 (Output) → Q1 **Second** 2N7000 FET Gate
 - PulseCounter NANO1 - D9 (Output) → Q6 **Second** 2N7000 FET Gate (opposite branch)

- **Sequencer Arduino Outputs**

- Sequencer NANO2- D9 (Output) → Input to Q4 - **Third** 2N7000 Gate.
- Sequencer NANO2 - D10 (Output) → Input to Q9 - **Third** 2N7000 Gate (opposite branch)

- **Gate Enable/Disable Button**

- Connect NANO1 - D6 -> BUTTON -> GND

- **SyncMode / Offset Mode Button**

- Connect NANO2 - D4 -> BUTTON -> GND

Note: The schematic shows the outputs merged due to limitations, but there should be dual outputs from the sequencer, D9 and D10, each connecting to a separate AND gate tree.

- **Shared Connections**

- Both Arduinos' GND pins should be connected together to ensure a common ground.

Gate Driver Chip Connections

IR2110PB Gate Driver Chip

1. **Power Connections**

- VCC (Pin 3) → +12V REG
- VSS (Pin 2, 10, 11, 15) → GND
- VDD (Pin 9) +5V REG

2. **Input Connections**

- LIN (Pin 12) → Arduino PWM pin (as per script)

3. **Output Connections**

- LO (Pin 1) → Gate of the IRFP460 MOSFET

4. **Bootstrap Capacitor**

- Connect a 22 μ F and a 100nF capacitor near VDD (Pin 9) and Ground.

5. **No Connection**

1. Pin 6, 7 - NC

6. **Noise Filtering**



- R2: Connect a 10 Ω resistor between LO and the gate of the MOSFET.
- D2: Place a 1N4001 diode in parallel with the Resistor R2 in reverse direction for added noise filtering and protection.

Schematic Overview

Refer to the schematic image to visualize these connections. The IR2110PB gate driver chips control the IRFP460 MOSFETs, enabling high-power switching of the VIC (Voltage Intensifier Circuit) primaries.

Additional Notes

- **Resistor Tolerances:** The resistors can have a large tolerance. The 56Ω value is selected to preserve signal clarity. Any value $\leq 220\Omega$ should be acceptable.
- **Merged Outputs:** The Arduino Channel Sequencer has 2 outputs shown merged due to Scheme-It limitations.

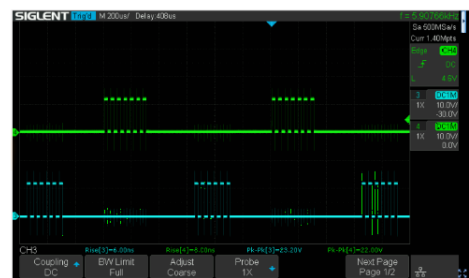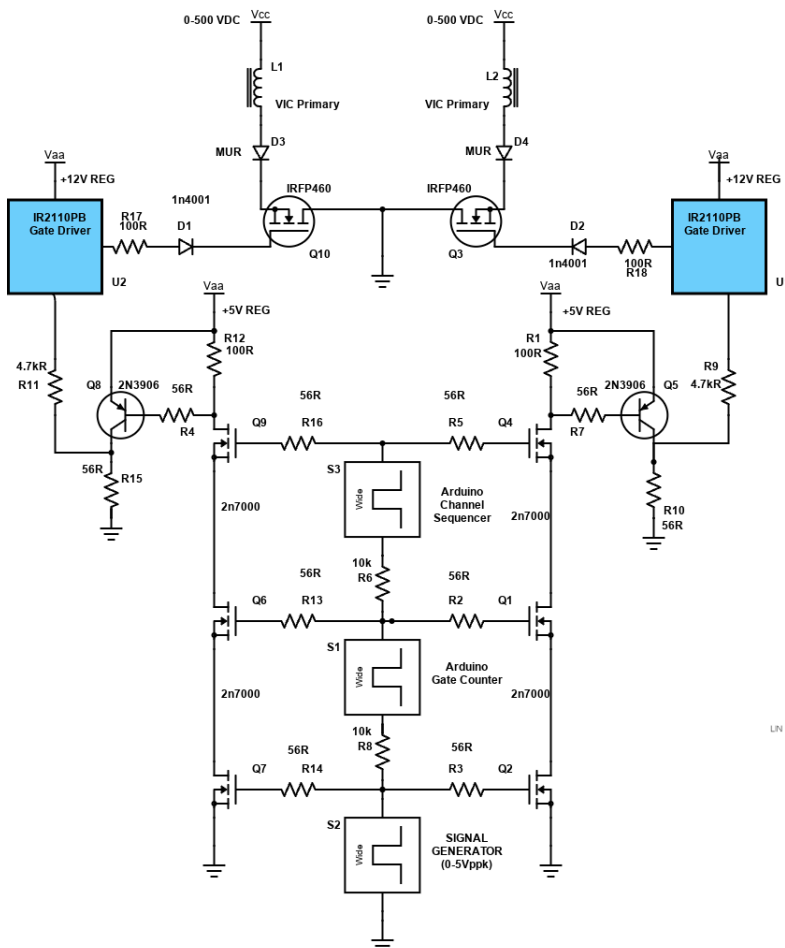

Perfect Pulse - Triple AND Gate Sequencer - Dual Gate Driver

By: Chris Bake
stanslegacy.com

Arduino code required. See Gate Driver below for additional chip connections.

